





DEPOSTEP®

INSTRUCIUNI DE MONTAJ
 SCARA POD METALICA TMP


READ SAFETY INSTRUCTIONS BEFORE USING

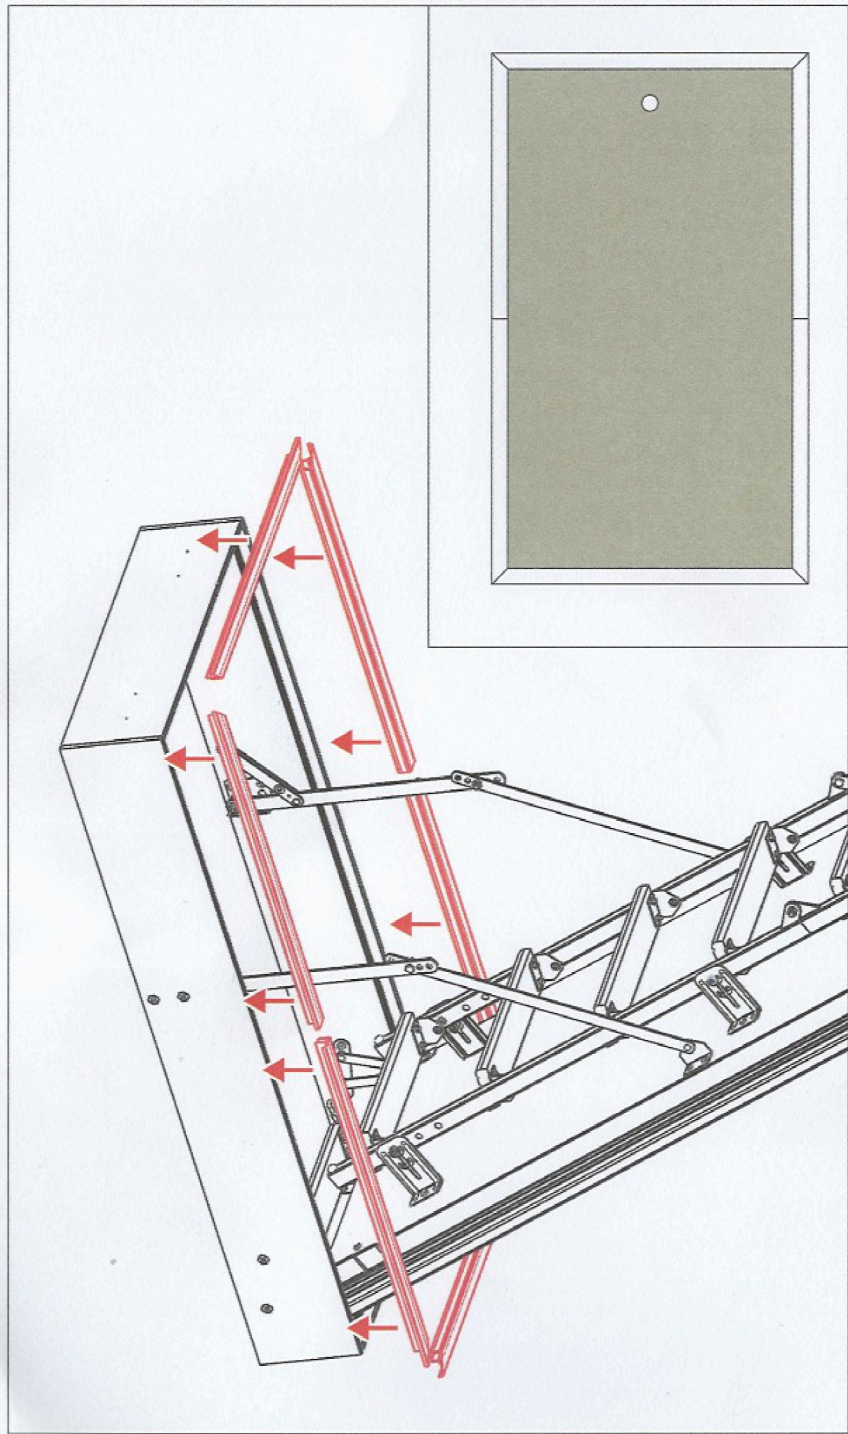







MISSO

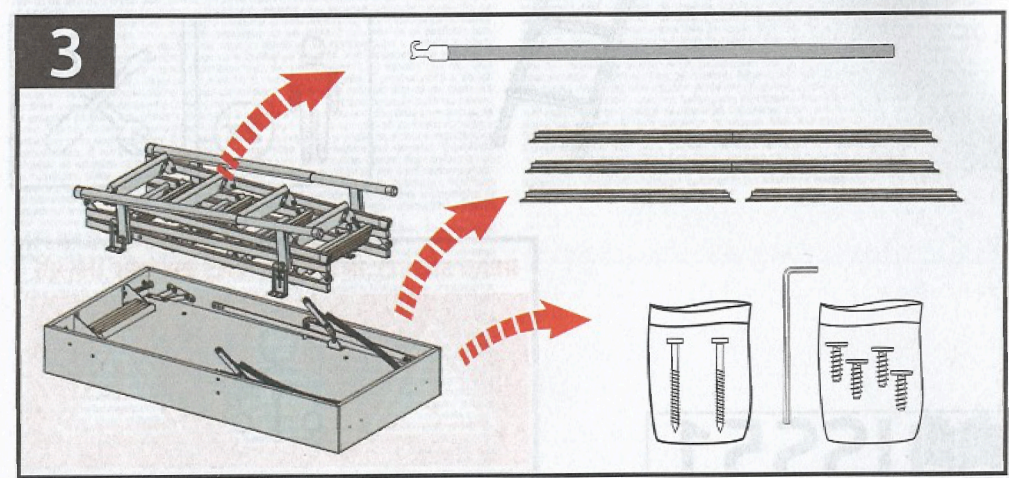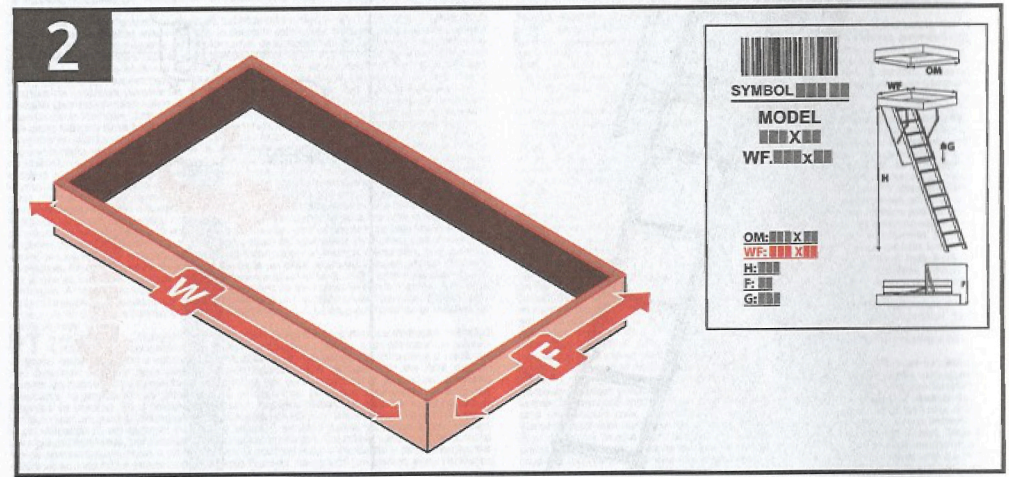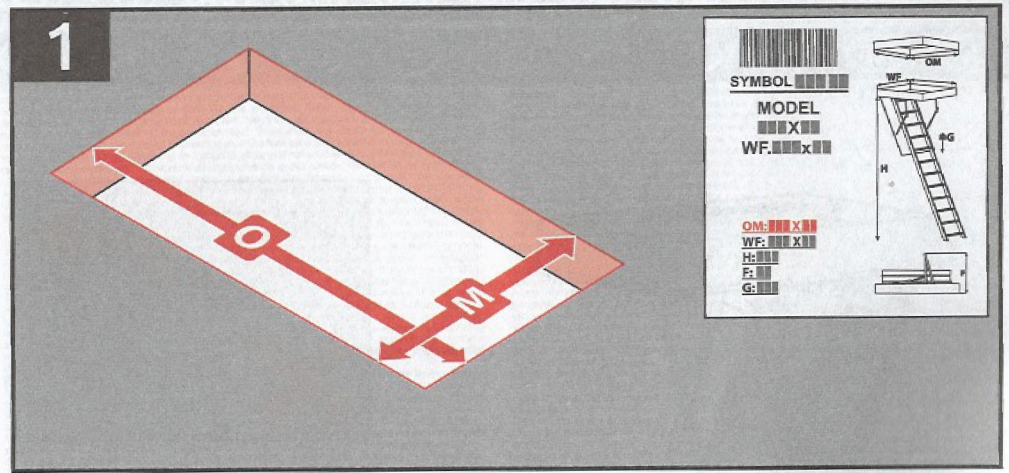

4


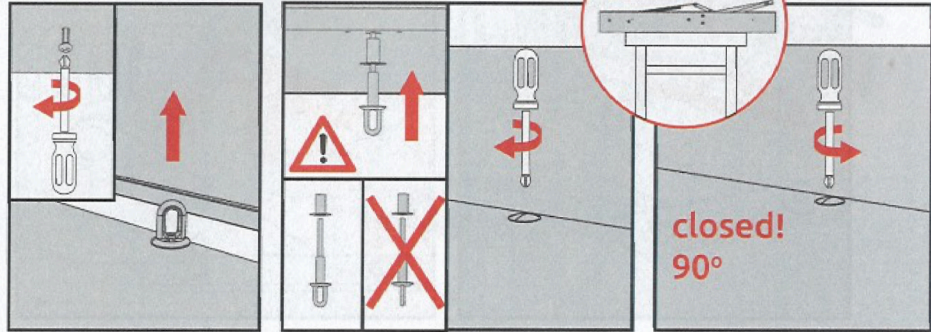


5

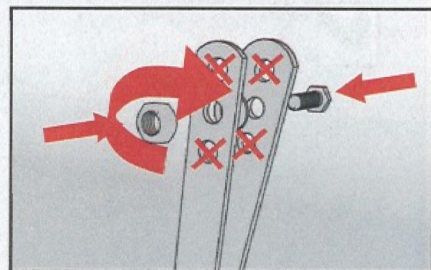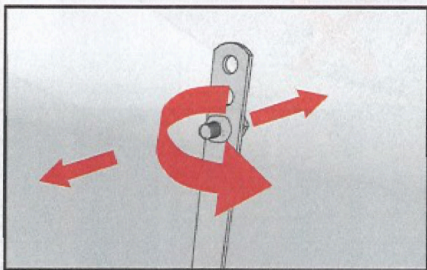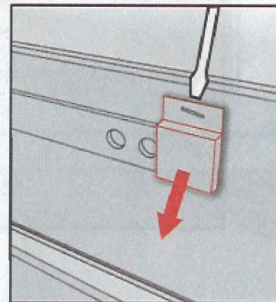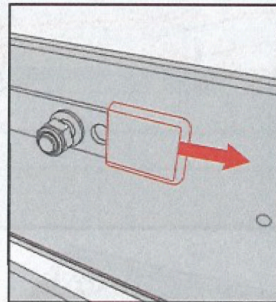
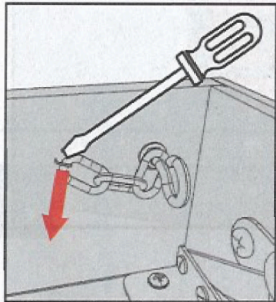
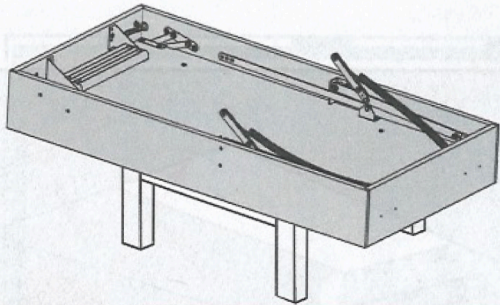


3







6

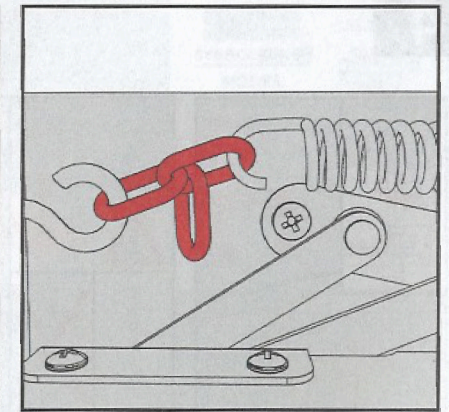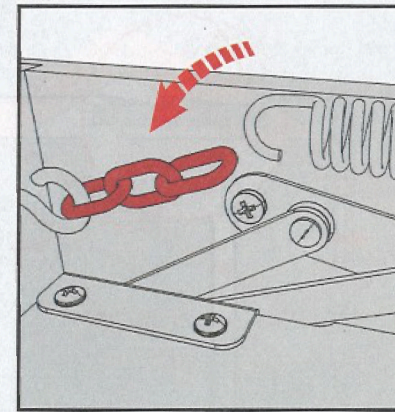


7

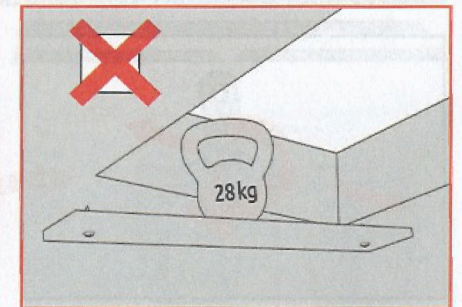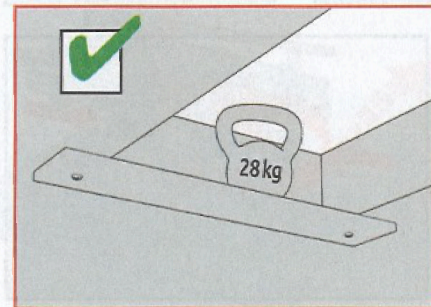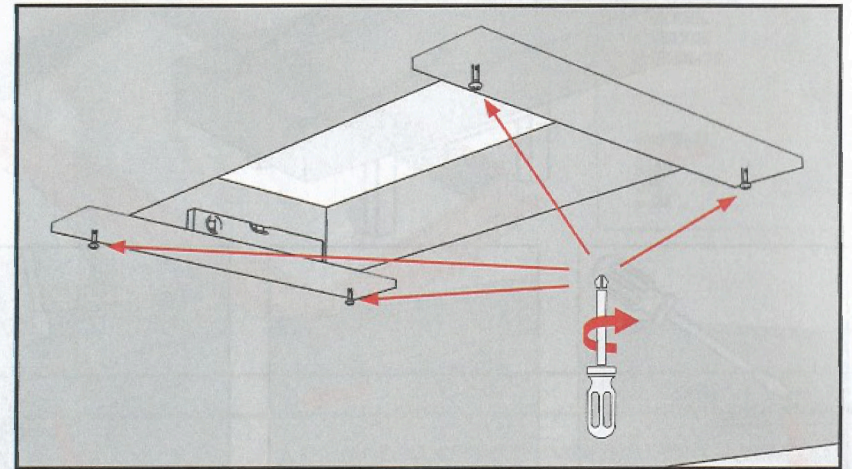


4

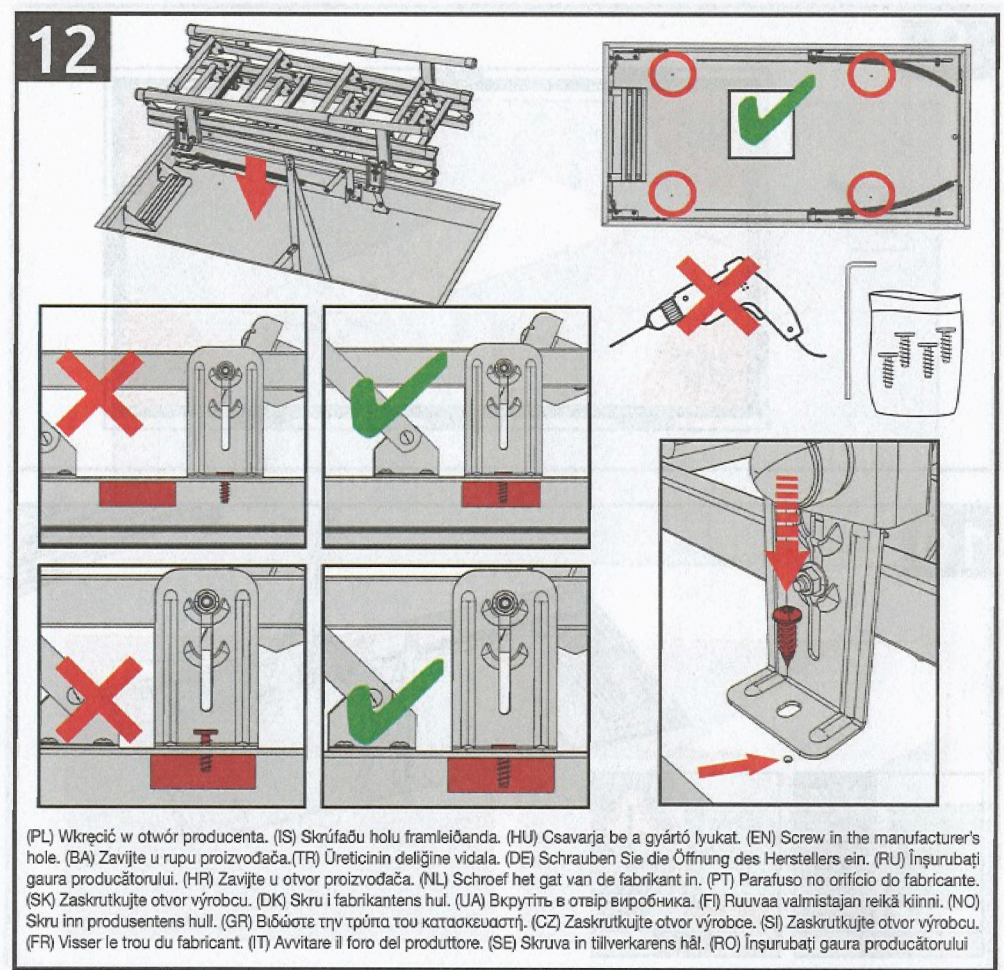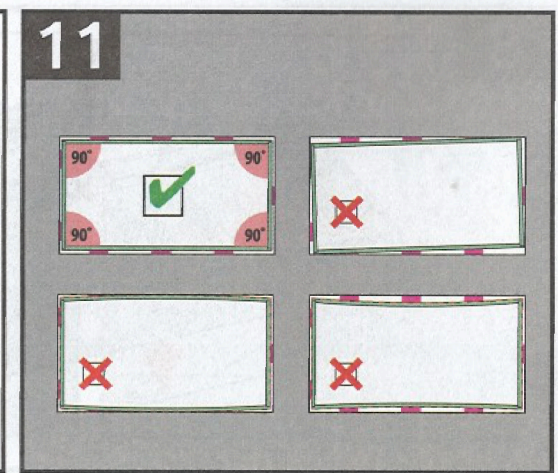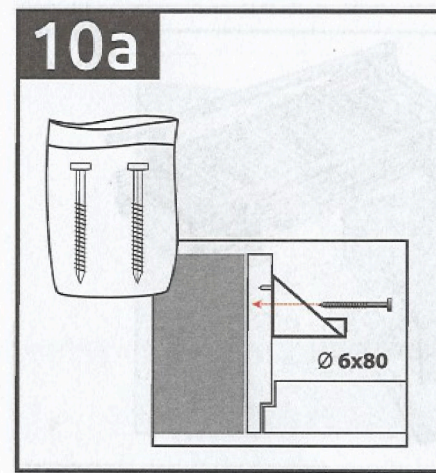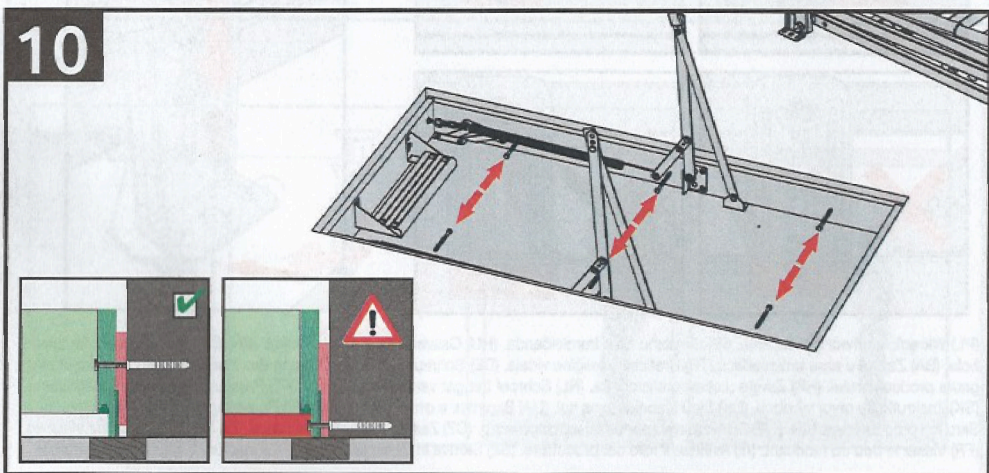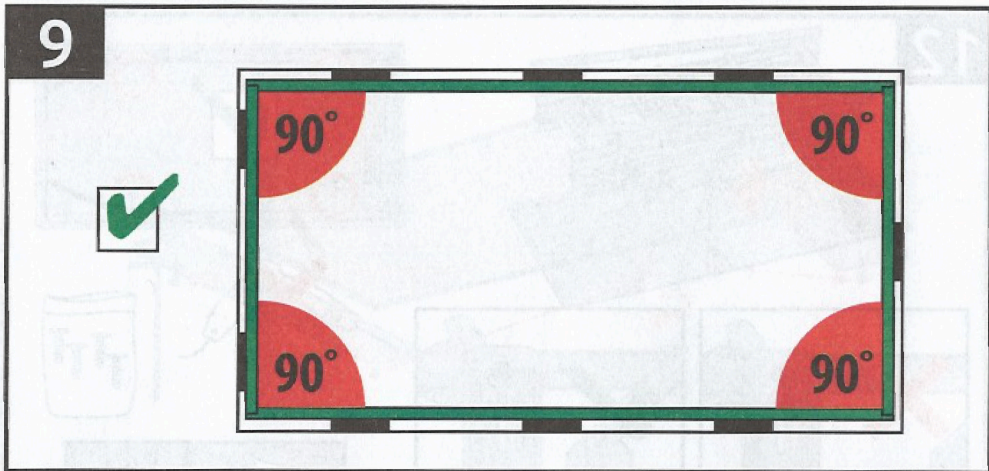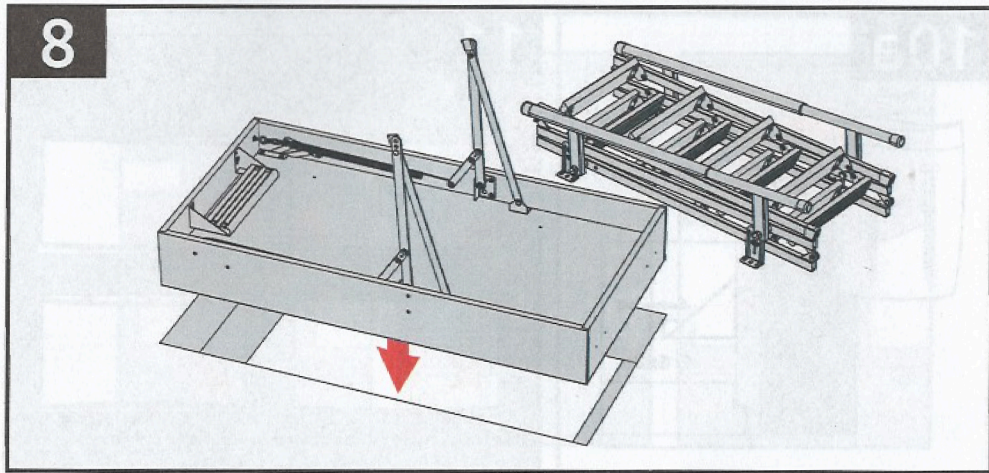


13

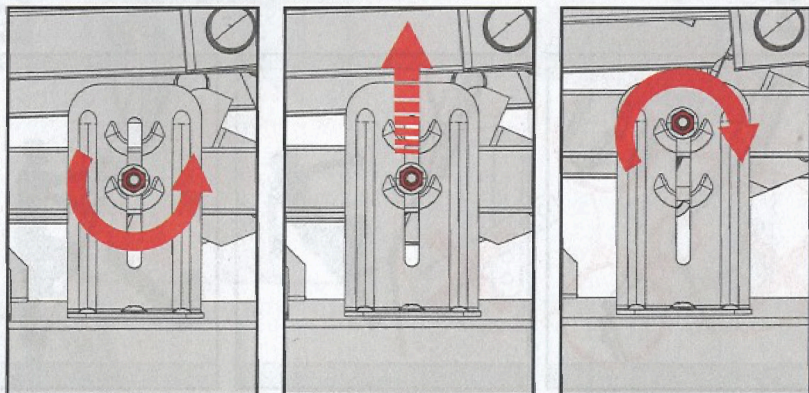


14

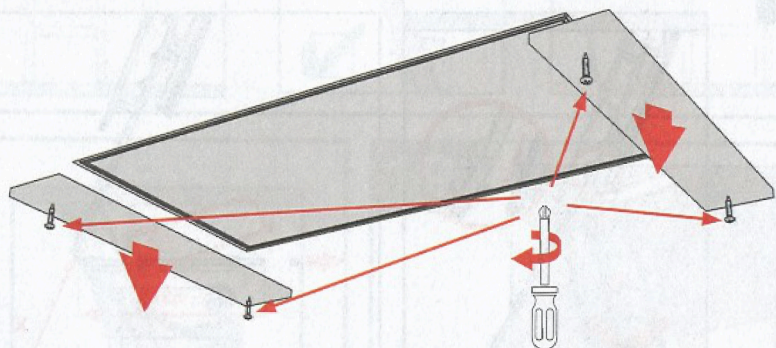

15

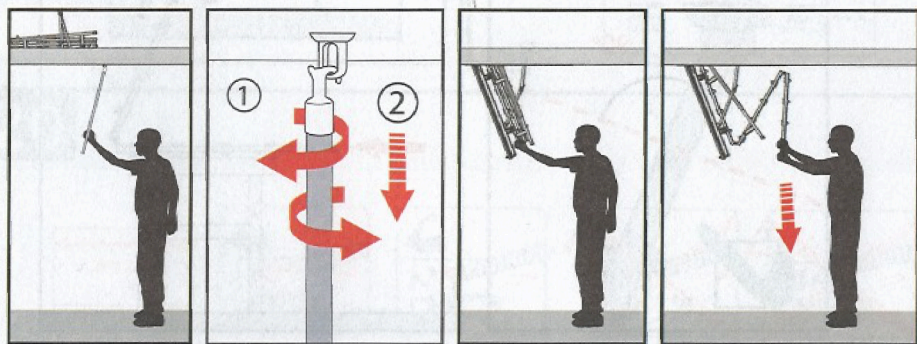

16

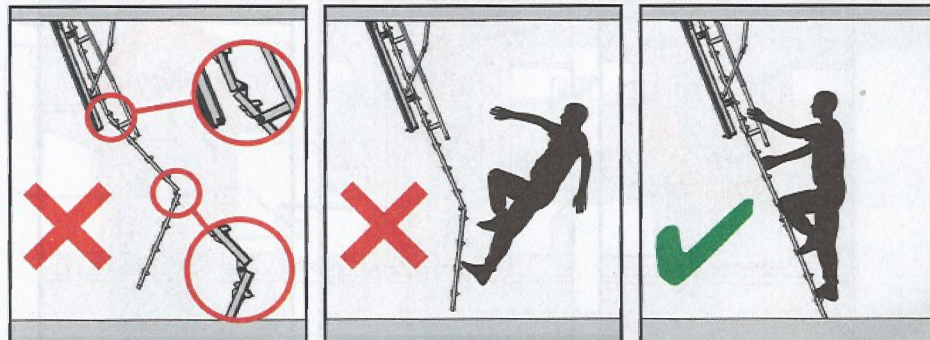

17

